# **Jaguar mat** installation / maintenance

### Assembly of modules into a complete mat

The modules are fitted together overlapping in a so-called brick pattern and should be positioned across the direction of travel. To facilitate assembly the modules' edges can be immersed in soapy water (a small amount of ordinary washing-up liquid and water), and subsequently gently knocked together with a rubber mallet.

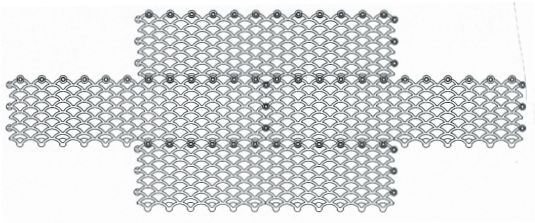

### Position the completed mat in a recess or directly on the floor

• The Jaguar Mat is not cantilevered, but should be placed on a firm, level surface, in a recess or with a ramp edging.

• Position the mat with the right side down, i.e. ***drainage channels and modulerings/fixings positioned downwards.***

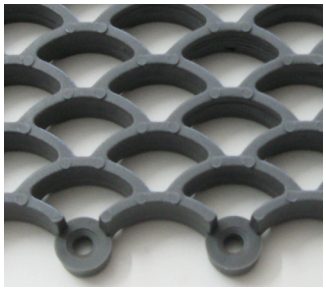

• Right side up. The curves should be positioned in the direction of travel.

• The mat is constructed/should be constructed with some excess, about 2% in the direction of travel, to prevent it moving in the recess in busy entrances. Press/force the mat down in the recess so that it extends to the edges.

• It is easy to make specific adjustments on site with a carpet knife.

### Repairing a damaged mat

The modules can be simply replaced in the event of damage. Pull off the damaged modules by hand and replace with new ones. Press the fixing rings together by hand or with a rubber mallet.

### Tidying / cleaning

The Jaguar Mat can be brushed or rinsed off when cleaning (including high-pressure washing). Ordinary floor/all-purpose cleaner can be used. Roll up the mat to enable cleaning underneath. For large mats it is recommended that half the mat is rolled up from one end in order to clean the recess, and then rolled back and the same procedure repeated with the other half.

### Supplementary accessories

#### Fixing anchor for mats longer than 3 m

Fixing anchors are used to prevent the mat moving in the direction of travel in busy entrances. They should be screwed into the floor (screws not supplied) at the start and end of the mat with mat lengths in excess of 3 m, plus one row every three metres for long lengths. One anchor per module width-wise. The mat's hollow sections are easy to press in place against the fixing anchor and are then equally simple to lift off for cleaning.

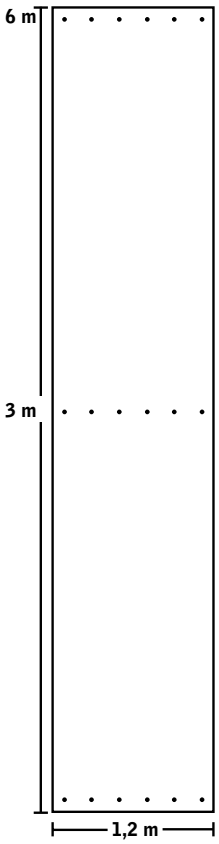


**Matting AB** Box 514, SE-441 15 Alingsås, Sweden **Tel:** +46 (0)322 - 67 08 05
**Email:** projekt@matting.se **www.entrancebymatting.se**

Entrance by Matting